

Installing a ceiling-mounted drying rack

It's wonderful that you are planning to assemble your drying rack!

I have provided a detailed step-by-step explanation along with clear photographs to ensure that the installation process is smooth and straightforward.



Installing ceiling brackets:

Position the first ceiling mount about 2.5 cm away from the wall, where the wall mount will be situated as well.

Next, accurately determine the placement of the next ceiling mount by positioning the rod beneath the mounting rings. The space between the mounts corresponds to the length of the drying rack.

Mark the drill holes, drill them using a size 6 drill bit in the appropriate locations, and insert the provided wall plugs (designed for concrete). If your wall or ceiling is of a different type, utilize appropriate wall plugs.

Secure the fasteners using a screwdriver to ensure the screws do not rotate out.



Install the wall mount at a height of approximately 150 cm from the floor, adjacent to the drying rack.

Is the wall mount positioned behind the wall where the drying rack is to be installed? Ensure it is placed at least 5 cm away from the side of the drying rack.



The provided rope has already been cut to the appropriate length.

7 pieces of 7 m each, appropriate for ceilings up to 2.60 m. For taller ceilings, you can lengthen the rope after the rack is suspended by connecting additional rope to the end.




Pass the rope through the circles in the ceiling mount utilizing the provided iron wire (helper) as illustrated in this photo.



The cords should be arranged as depicted in this photo, with the wall mount configured as double on one side and single on the opposite side. (Refer to the drawing on the back.)



Once all the strings have been threaded through the beads, it is time to string the beads. Utilizing the "helper," thread the doubled string through two beads. Utilize pliers for this task to ensure that you can effectively pull the rope through.

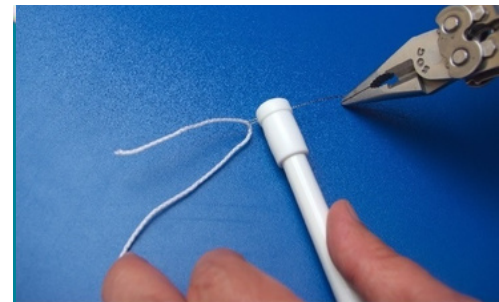

Now suspend the rods. Pass the string through the ends of the rods and then tie a firm knot underneath. The smaller hole should be positioned on top, while the larger hole should be at the bottom, allowing the knot to fit snugly into the larger hole and remain concealed.




Ensure that the knot is tight and the rope is positioned straight up. If needed, make slight adjustments to the end for proper alignment. Do this for each of the rods.



Pull the rope to ensure that the rods are suspended just beneath the ceiling mount.



After the rod is properly hung, you can secure a knot beneath the bead at the level of the wall mount to stop it from moving when laundry is placed on the rods. Do this for each rod.

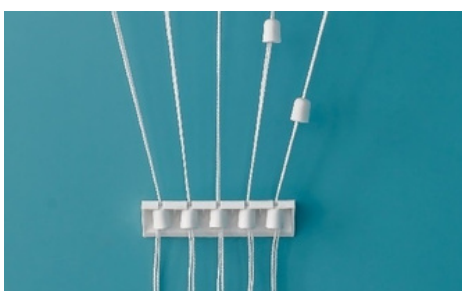

You can fasten the second bead to the end of each rope at the bottom. This is beneficial if you wish to hold the rope firmly when the rods are positioned low and lift them up.







You can now lengthen the strings if the bar is hanging down and you are unable to reach the end of the string to lift the bar up.

If you have completed all the steps accurately, your drying rack is now prepared for use!

If you have any inquiries or feedback regarding installation, usage, or any other matters, please do not hesitate to reach out to me.




You may reach me by phone or send a WhatsApp message to +31615379741 (available from 9 am to 7 pm at the latest).

Assembly diagram

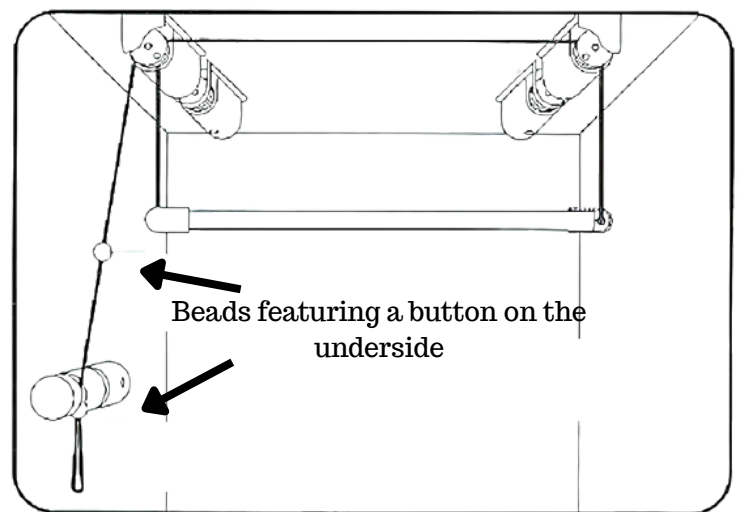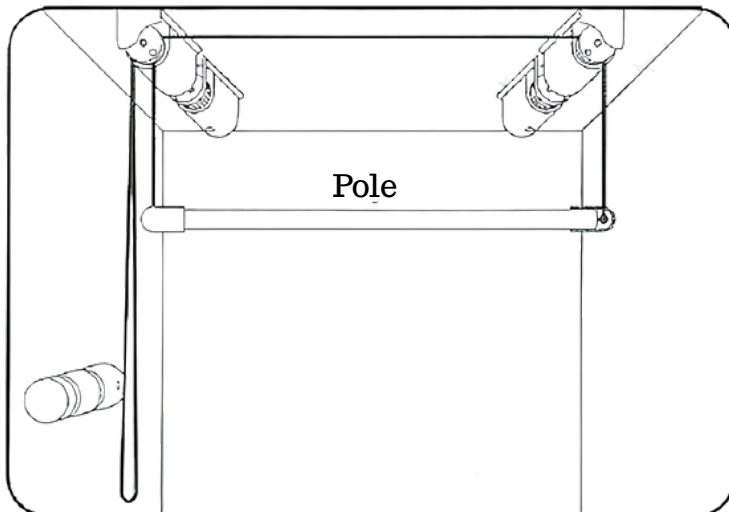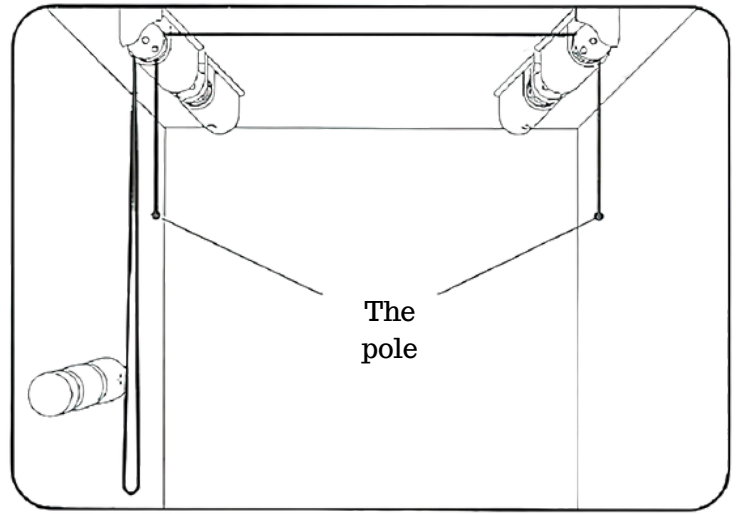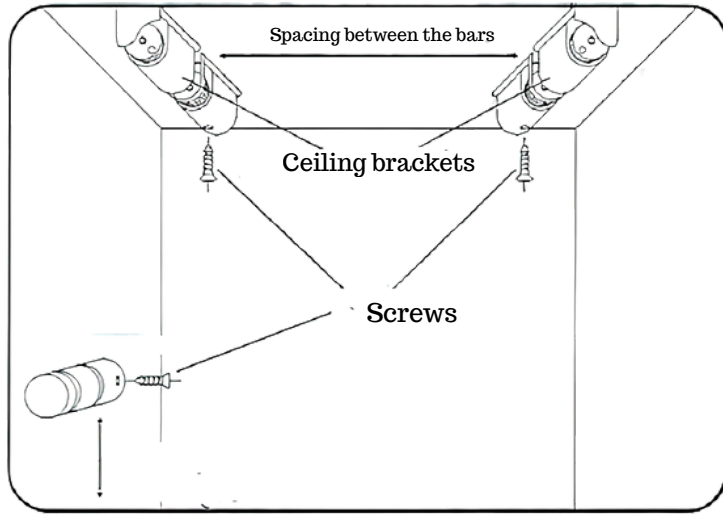

I would greatly appreciate it if you could send me a photo to share on my social media platforms (Facebook, Instagram, or Google+). You can also send them to me via email at info@plafonddroogrek.nl. I hope you enjoy your drying rack and have plenty of dry laundry.

Useful link:
www.plafonddroogrek.nl/installation/
Or scan the code to access the comprehensive installation page featuring useful videos!

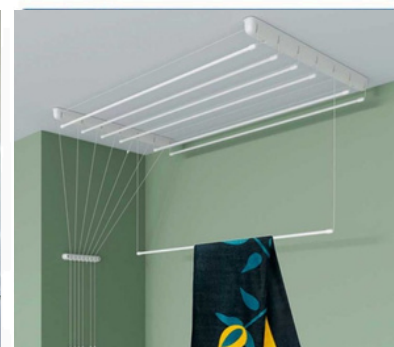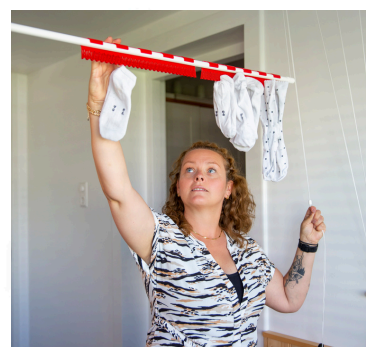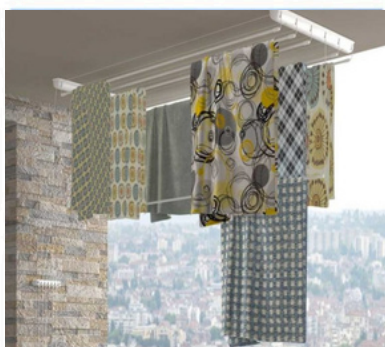

PLAFONDDROOGREK.NL